



Ref #'s

RSZ03112210-1&2
RSZ03112210-3
RSZ03112210-16



KULLANIM KLAVUZU

Kapsadigi Modeller

HA9888(12)TS
HA9888(12)TSD

**THE ENGLISH USERS MANUAL
IS IN THE FOLLOWING PAGES
INGILIZCE KULLANIM KLAVUZU,
DEVAM EDEN SAYFALARDADIR**

Lutfen once bu klavuzu okuyun.

Hotel / Motel'ler icin iyi seyler yapiyoruz ..

TELEFONUZU PAKETTEN ÇIKARMAK

Bu paket aşağıdakileri kapsamaktadır:

- HA 9888 - 12 ana ünite
- Onyüzeyler
- Ahize
- Dongusel ahize kablosu
- Düz bağlantı kablosu
- Bu klavuz

KURULUS

HA 9888 - 12 Serileri PBX sisteminin arkasında ve otel kullanımı için tasarlanmıştır. Önce telefonun bağlanacağı duvar fişini tespit edin. Yok ise büyük alışveriş mağazalarında, bu tür fişleri tedarik eden büyük nalbur tipi alışveriş merkezlerinde kolaylıkla bulunabilir.

- 1) HA 9888 - 12 telefonun sol tarafında modüler bir fiş bulunmaktadır. Dongusel ahize kablosunun bir ucunu bu fişe yerleştirin (düzgün yerleştirildiğinde “kık” şeklinde bir kablo bağlantı sesi duyacaksınız.)
- 2) Dongusel ahize kablosunun diğer ucunu da ahizede bulunan fişe yerleştirin.
- 3) Telefonu alt yüzü size bakacak şekilde ters çevirin. Düz bağlantı kablosunun her hangi bir ucunu da “**TO TEL**” yazan fişe yerleştirin.
- 4) Aynı kablounun diğer ucunu da duvar telefon prizine takın.
- 5) 5) Telefon bağlantısı yapıldıktan sonra, onyüzey baskı kartonu, setin üzerine tıslara geçecek şekilde yerleştirin. Daha sonra üzerine gelecek plastik onyüzey koruma kapagini onyüzey baskı kartonunun üzerine gelecek şekilde, önce sağ ve sol dişleri, setin yerleştirme oyuklarına gelecek şekilde sokun. Plastigi ortadan bukerek diğer (sağ veya sol) dişleri kolayca yerleştirebilirsiniz.

KONTROL, BAGLANTI VE FONKSIYON TUSLARI

- (1) “Hearing Aid Compatible” , Az Duyanlara Yardim Uyumlu -- Ahize
- (2) Duvar Uygulamalari Ahize Kilibi -- Duvar montaj uygulamalarinda ahizeyi tutar, kaymasini onler.

- (3) Ahize Switch'i
- (4) Bittel logo
- (5) Ahize prizi
- (6) Ön karton baskı
- (7) Data Port, bilgisayar, faks gibi cihazların telefonun hattını kullanmaları
- (8) [STORE] Tusu -- Sakli bir tus olup, hafiza tuslarına numaraların depolanması imkanını verir.


- (9) [PAUSE] Tusu -- Sakli bir tus olup, yuklenen numaraların arasına 3.6 saniyelik bekletme koymaktadır.


- (10) Hafiza Tuslari -- Özel işlev ve sık kullanılan numaralar için kullanılan tek basis için programlanabilen tuslar.

- (11) Cevirme Tuslari -- Numara cevmek için, numerik klavye.
- (12) [SPKR] Tusu ** -- Ahizesiz gorusme özelliğini devreye sokar.
- (13) Tekrar Cevir – REDIAL Tusu -- Son cevriren numarayı cevirir.
- (14) Mesaj Uyarı İşigi -- ATelefonun caldigini veya mesaj bekledigini uyarmaktadır. Neon/90V message uyarı
- (15) BEKLETME – FLASH Tusu -- Özel telefon sistem özelliklerine girebilmek için 600 ms lik bir bekletme sinyali atar..

- (16) Mikrofon
- (17) [HOLD] Tusu -- Bir arayani hatta tutar.
- (18) Placard (bilgi totemi) deliği
- (19) To Tel girişi, duvardan gelen kablo girişi
- (20) Ringer -- Calma ses siddeti ayarını, LOW-ALCAK ve HI-YUKSEK olarak ayarlamaktadır.

- (21) Montat oyuğu
- (22) Set alt tepsisi için oyuklar

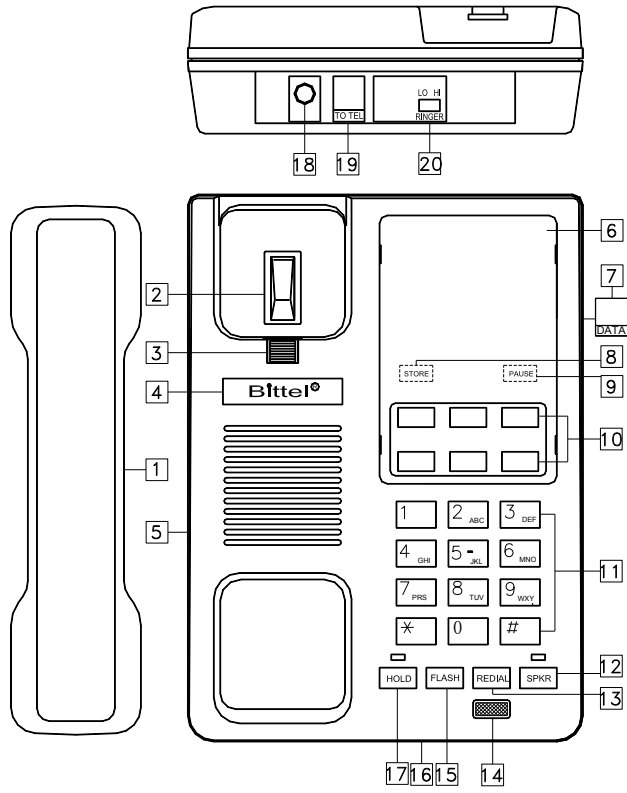

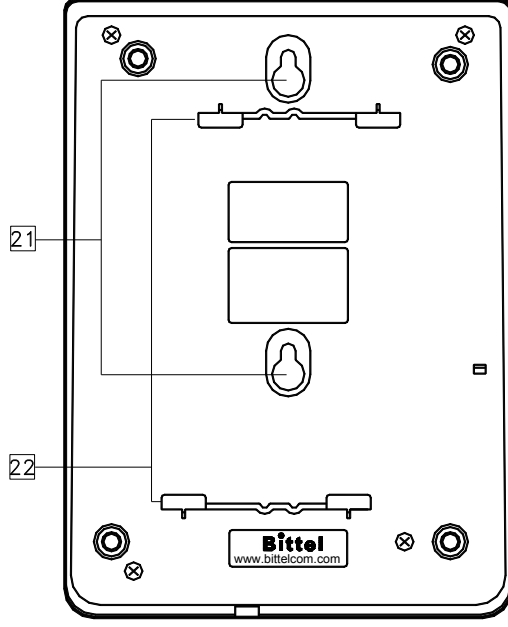

ARAMA YAPMAK

Ahizeyi Kullanmak

- 1) Ahizeyi kaldırın.
- 2) HA 9888 - 12 telefonu uygun bir hattı bulacaktır.
- 3) Cevir sesini duyun. İstediginiz numarayı cevirin, veya otomatik olarak numarayı tekrar çevirmek istediğinizde [REDİAL] tusuna basın.
- 4) Gorusmeyi bitirmek için, ahizeyi tekrar yerine yerleştirin.

Ahizesiz gorusme yapmak için

- 1) [SPKR] tusuna basın
- 2) Cevir sesini bekleyin.
- 3) Numarayı cevirin.
- 4) Bittiginde [SPKR] tusuna basın.

ARAMAYA CEVAP VERMEK

Ahizeyi Kullanmak

Telefon caldiginda, ilgili hattin isigi siklikla yanip sonecektir.

- 1) Ahizeyi kaldirin.
- 2) Gorusmeyi bitirtmek icin, ahizeyi tekrar yerine yerlestirin.

Ahizesiz gorusme yapmak icin

Telefon caldiginda, ilgili hattin isigi yanip sonecektir.

- 1) [SPKR] tusuna basin.
- 2) Telefon hattı alarak , ahizesiz konusma moduna girecektir.
- 3) Bittiginde [SPKR] tusuna basin.

AHIZESİZ GORUSMEDE İPUCLARI:

Ahizesiz gorusmeden **ahizeli** gorusmeye gecmek icin:

Ahizeyi kaldirin.

Ahizeli gorusmeden **ahizesiz** gorusmeye gecmek icin:

- 1) [SPKR] tusuna basin.
- 2) Ahizeyi kapatın.

[HOLD] TUSUNU KULLANMAK

Bir aramayi bekletmeye almak

[HOLD] tusuna basarak arayani bekletmeye alabilirsiniz.
Hat isigi kirmiziya donecektir..

Bir aramayi bekletmeden geri almak

- Ahizeli kullanimda, bekletmeden cikartmak icin, [HOLD] tusuna basin
- Ahizesiz kullanimda, [SPKR] tusuna basin.

Bir Aramayi Hatta Bekletirken Telefonlari Degistirmek

- 1) Arayani [HOLD] tusuna basarak bekletmeye alin.
- 2) Ahizeyi yerine koyun. Hoperloru kullanirken, arayani tutmak icin tekrar [HOLD] tusuna basin
- 3) Baska bir telefonda aramayi baslatin. BİTTEL E telefonu olan hatti anlayacak ve tutma durumundaki aramayi orjinal telefondan cikaracaktır..

AHİZE VE HOPARLOR SESİNİ AYARLAMAK

Ahize ses tusu ses ayarininin [VOL], seviyeli ayari yoktur.
Bu ayari yapmak icin, setin sag tarafindaki anahtari kaydirin.

CALMA SESİNİ AYARLAMAK

Setin arkasinda bulunan RINGER LOW/HI ayar kontrol dugmesini istediginiz sekilde konumlandirin. Kontrol dugmesini istenen seviyeye ALCAK-LOW veya YUKSEK-HIGH, seklinde ayarlayabilirsiniz.

HAFIZA TUSLARINI ROGRAMLAMAK

Bu islemi yapabilmek icin, telefon hatta takili olmalidir.

- 1) Ahizeyi kaldirin veya [SPKR] tusuna basin,
- 2) [STORE] tusuna basin,
İstediginiz numarayi, [PAUSE] ve [FLASH] gerektiginde bu tuslarda dahil olmak uzere tuslayin, [STORE] tusuna tekrar basin. Sira, maksimum 16 hane olabilir,
- 3) İslemi bitirmek icin, numarayi atamak istediginiz hafiza tusuna basin ([MWL] tusu da dahil olmak uzere),
- 4) Telefonu kapamak icin, ahizeyi yerine koyun veya [SPKR] tusuna basin.

MESAJ UYARI ISIGI

Lucent LED veya yuksek voljali neon/90V sistemeleriyle es uyumludur.
Telesekreter erisim numarasi girilmis ise, mesajlari dinlemek icin, ahizeyi kaldirin veya [SPKR] tusuna, sonra [MWL] tusuna basin.
[MWL] ayni zamanda telefon calma uyari isigidir.

MASA TIPINDEN DUVAR TIPINE CEVIRMEK

Hat baglantisindan once bu islemi gerceklestirin.

Seti, duvara montaj edilmis iki montaj kitiyle ayni hizada tutun, Sette bulunan iki klavuz da duvardaki montaj kitine oturacaktır, seti yavasca asagiya kaydirin. Set, yerine oturdugunda saglam ve guvendedir.

FCC sartlari oldugu icin, İngilizce aslina sadik kalinmisir.

“ REQUIRED FCC NOTICE

The REN is used to determine the quantity of devices, which may be connected to the telephone line. Excessive REN's on the telephone line may result in the devices not ringing in response to an incoming call. In most, but not all areas, the sum of the REN's should not exceed five (5.0). To be certain of the number of devices that may be connected to the line as determined by the total REN's, contact the telephone company to determine the maximum REN for the calling area.

If this equipment causes harm to the telephone network, the telephone company will notify you in advance that temporary discontinuance of service may be required. If advance notice isn't practical, the Telephone Company will notify you as soon as possible. Also, you will be advised of your right to file a complaint with the FCC if you believe it is necessary.

The Telephone Company may make changes in its facilities, equipment, operations, or procedures that could affect the operation of this telephone. If this happens, the Telephone Company will provide advance notice in order for you to make the necessary modifications in order to maintain uninterrupted service.

If you experience trouble with this telephone, please contact Bittel Inc. at (86) 633-2212119 for repair or warranty information. If the trouble is causing harm to the telephone network, the Telephone Company may request that you remove the equipment from the network until the problem is resolved. The customer can do the following repairs: replacement of cords or handset; replacement of window for telephone number.

This telephone cannot be used on Telephone Company provided coin service. Connection to Party Line Service is subject to state tariffs.

FCC Approval

The HA 9888 - 12 telephone Series complies with Part 68 of the FCC rules. On the bottom of this telephone is a label that contains, among other information, the FCC registration number and the ringer equivalence number (REN) for this telephone. If requested, you must provide this information to the Telephone Company.

The Ringer Equivalence Number (REN)

The Ringer Equivalence Number (REN) assigned to each terminal device provides an indication of the maximum number of terminals allowed to be connected to a telephone interface. The termination on an interface may consist of any combination of devices subject to the requirement that the sum of the Ringer Equivalence Numbers of all the devices does not exceed 5.

“

Fisler

HA 9888 - 12 serisi telefonlar standart olarak, RJ11C USOC moduler fis kullanir.

Duyma Ozur Yardimi Es Uyumu

HA 9888 - 12 Serileri, duyma ozur yardimi es uyumludur.

GARANTI

Bu urun, satin alindigi tarihten sonra 24 ay sure ile hatali uretime karsi garanti kapsamindadir.

Asagida belirtilen kosullar dogrultusunda, bu sure zarfinda, bir ariza tesbit oldugu takdirde, Bittel'in takdir hakki sakli olmak kaydiyla, ilgili urun onarilir veya tamamen degistirilir:

- 1) Normal kullanim disinda kullanilmamis ise
- 2) Yetkili olmayanlarin, onarim veya modifikasyon icin, sete mudahalesi
- 3) Urun, pis, kotu, nemli ortamlarda kullanilmamis ise
- 4) Tasimada zarar gormemis ise

BU ZAMANSAL GARANTI, SATIN ALANA TUM KANUNI HAKLARINI SAGLAR. ALICI AYNI ZAMANDA YETKI ALANINDAN DOGAN DIGER HAKLARA DA SAHIPTIR.

Bu garanti, urunun Bittel veya Bittel Co.'nun yetkili kildigi herhangi bir temsilciden alindiginda gecerlidir.

BITTEL İLE TEMAS

Telefon: (86) 633-2212119/2212113
İnternet: www.chinabittel.com
Email: [intlsales @bittel.com.cn](mailto:intlsales@bittel.com.cn)
Adres: Shandong Bittel Electronics Co. ,Ltd.
No. 1 Rizhao North Road, Rizhao,
Shandong , 276800, Cin

HOTELNET (ASTRO A.Ş.) İLE TEMAS

Telefon: 90-212-2027411, Faks: 90-212-2027416
İnternet: www.hotelnetnet.com
Email: info@hotelnetnet.com
Adres: HotelNet İletişim Sistemleri Ltd. Sti.
Yeni Basın Yayın Sitesi, 2. Cadde, # 36
34450, Zekeriyaköy, Sarıyer, İstanbul, Türkiye

Bittel, Cin tarafından oluşturulan orijinalinden, HotelNet, Türkiye tarafından tercüme edilmiştir. Her hakkı saklı olup, toplam 13 sayfadır.



Shandong Bittel Electronics Co., Ltd.
No.1 Rizhao North Road,
Rizhao, Shandong, China, 276800
Tel: +86 633 2212125/2103/2160/2177
Fax: +86 633 2212118
email: info@bittelgroup.com

Declaration of Conformity

Declaration Number: DOC141124

Date: 24th Nov., 2014

We: **Shandong Bittel Electronics Co., Ltd.**
No.1 Rizhao North Road, Rizhao Shandong, 276800, China

**Certify that the product described is in conformity with the EC Directive 2006/95/EC,
2004/108/EC, 1999/5/EC**

Model number:

HCD9888TSD HCD9888TS HA9888TSD HCD9888(38)TSD HA9888(38)TS
HA9888(38)TD HA9888(38)TSD HCD9888(40)TSD HA9888(32)TS HA9888(32)TSD
HA9888(12)TSD HA9888(12)TS HA9888(49)TSD HCD9888(49)TSD HA9888(48)TS
HA9888(48)TSD HA9888(58)TS HCD9888(58)TSD

HA9888(67)TSD HCD9888(67)TSD HA9888(67)TS HCD9888(68)TSD HA9888(68)TSD
HA9888(68)TS HA9888(69)TSD HA9888(69)TS HCD9888(69)TSD HA9888(66)T
HA9888(66)T-T

HA9888(41)T-18 HA9888(41)T-5+ HA9888(41)T HA9888(41)T-0 HA9888(41)T-0+
HA9888(41)T HA9888(41)T-5 HA9888(41)T-T HA9888(41)T-T+ HA9888(25)T
HA9888(25)T(E) HA9888(41)T-25

HWD9888(67)TSD HWD9888(68)TSD HWD9888(38)TSD HWD9888(69)TSD
HWD9888(48)TSD HWD9888TS HWD9888TSD HWD9888(68)TSD
HWD9888TS HWD9888TSD

HWD9888(67)TSD HWD9888(38)TSD HA9888(68)TSD-IP HA9888(66)TSD-IP
HA9888(67)TSD-IP HA9888(68)TSD-IP HA9888(69)TSD-IP HA9888(77)TSD-IP
HCD9888(58)TSD-IP HCD9888(67)TSD-IP HCD9888(68)TSD-IP HWD9888(58)TSD-IP
HWD9888(66)TSD-IP HWD9888(67)TSD-IP HWD9888(68)TSD-IP HWD9888(69)TSD-IP
HWD9888(67)TSD-IP HWD9888(68)TSD-IP HA9888TSD-IP
HWD9888TSD-IP HWD9888TSD-IP HCD9888TSD-IP

HT20 HT60 HA9888(62)TSD



Are in conformity with the following essential requirements and harmonized standards.
The product has been assessed by the application of the following standards:
LVD EN 60950-1:2006+A11 :2009+A1:2010+A12:2011+A2:2003
EMC EN 55022:2010+AC:2011
EN 55024:2010

Jiangwen Tian

Authorized Signatory:

Name: Jiangwen Tian
Title: Chief Engineer



Shandong Bittel Electronics Co., Ltd.
No.1 Rizhao North Road,
Rizhao, Shandong, China, 276800
Tel: +86 633 2212125/2103/2160/2177
Fax: +86 633 2212118
email: info@bittelgroup.com

Deklarasyon Numarası: DOC141124

Tarih: 24 Kasım 2014

Bizler,
Shandong Bittel Electronics Co., Ltd.
No.1 Rizhao North Road,
Rizhao, Shandong, Çin, 276800
olarak, teyit ve tasdik ederiz ki, aşağıda belirttiğimiz, ürünler tamamen
EC Directive 2006/95/EC, 2004/108/EC, 1999/EC şartlarına uygundur.

Model Numaraları :

HCD9888TSD HCD9888TS HA9888TSD HCD9888(38)TSD HA9888(38)TS
HA9888(38)TD HA9888(38)TSD HCD9888(40)TSD HA9888(32)TS HA9888(32)TSD
HA9888(12)TSD HA9888(12)TS HA9888(49)TSD HCD9888(49)TSD HA9888(48)TS
HA9888(48)TSD HA9888(58)TS HCD9888(58)TSD

HA9888(67)TSD HCD9888(67)TSD HA9888(67)TS HCD9888(68)TSD HA9888(68)TSD
HA9888(68)TS HA9888(69)TSD HA9888(69)TS HCD9888(69)TSD HA9888(66)T
HA9888(66)T-T

HA9888(41)T-18 HA9888(41)T-5+ HA9888(41)T HA9888(41)T-0 HA9888(41)T-0+
HA9888(41)T HA9888(41)T-5 HA9888(41)T-T HA9888(41)T-T+ HA9888(25)T
HA9888(25)T(E) HA9888(41)T-25

HWD9888(67)TSD HWD9888(68)TSD HWD9888(38)TSD HWD9888(69)TSD
HWD9888(48)TSD HWD9888TS HWD9888TSD HWD9888(68)TSD
HWD9888TS HWD9888TSD

HWD9888(67)TSD HWD9888(38)TSD HA9888(68)TSD-IP HA9888(66)TSD-IP
HA9888(67)TSD-IP HA9888(68)TSD-IP HA9888(69)TSD-IP HA9888(77)TSD-IP
HCD9888(58)TSD-IP HCD9888(67)TSD-IP HCD9888(68)TSD-IP HWD9888(58)TSD-IP
HWD9888(66)TSD-IP HWD9888(67)TSD-IP HWD9888(69)TSD-IP HWD9888(69)TSD-IP
HWD9888(67)TSD-IP HWD9888(68)TSD-IP HA9888TSD-IP
HWD9888TSD-IP HWD9888TSD-IP HCD9888TSD-IP

HT20 HT60 HA9888(62)TSD

Yukarıda belirtilen bu modeller aşağıda sıralanan
asli kural ve harmonize standartlara tamamen uygundur:

LVD **EN 60950-1: 2006+A11 : 2009+A1+2010+A12:2011+A2:2003**
EMC **EN 55022:2010+AC:2011**
 EN 55024:2010

İsim : Jianwen Tian
Konumu : Müdenslik Bölüm Şefi



Ref #'s

RSZ03112210-1&2
RSZ03112210-3
RSZ03112210-16



USERS MANUAL

Covers Models

HA9888(12)TSD-A-6S
HA9888(12)TSD-A-3S

Please read this manual before use.

We bring good things to Hotel/Motel

Thank you for purchasing a Bittel product.

UNPACKING YOUR PHONE

This package should contain the following:

- 5) Blue moon base unit
- 6) Faceplates
- 7) Handset
- 8) Coiled handset cord
- 9) Straight line cord
- 10) This manual


INSTALLATION


The Blue moon Series is designed for hotel applications and behind a registered PBX system in hotel. Determine you have the correct modular jack for connecting the telephone. If you do not have a modular jack, one may be obtained at minimal cost at a local hardware store, discount store or home center.

- 1) Located on the left side of the Blue Moon phone is a modular jack. Insert one end of the coiled handset cord into this jack (you will hear the coil cord click when properly inserted.)
- 2) Insert the other end of the coiled handset cord into the modular jack on the handset.
- 3) Turn the telephone so the back panel is facing you. Insert either end of the line cord into the jack on the back of the telephone labeled **"TO TEL"**.
- 4) Insert the other end of the line cord into a telephone wall jack.
- 3) Once your telephone is connected, place the paper faceplate over the keys. The plastic overlay slips into place by hooking the tabs on the overlay into the recessed slots located on both sides. The overlay is easiest to insert when the left or right side tabs are inserted first, and the middle of the overlay is slightly bowed to allow for insertion of the other tabs.

Controls, Connections and Function keys

- (1) **Hearing aid compatible handset .**
- (2) **Hook Switch**
- (3) **Handset Wall Mount Clip** – Clip to hold handset on hook in wall mount application .
- (4) **Bittel logo**
- (5) **Handset Jack** – Modular jack to connect handset cord.
- (6) **Faceplates**
- (7) **Data Port** – Provides access to the telephone line for connection of modem, fax, or answering machine.
- (8) **Store Key** – Hidden key for storing numbers to memory key.
- (9) **Pause key** - Hidden key inserts a 3.6 second pause in stored no.'s
- (10) **Memory Keys** --Programmable to add special features or one touch dial frequently dialed numbers.
- (11) **Dial Keys** – Oversized keypad for ease of dialing.
- (12) **SPKR Key** – Activates speakerphone function
- (13) **Redial Key** – Redials the last number dialed.
- (14) **Message Waiting Light** – Indicates the phone is ringing or a message is waiting. Responds to Neon/90V message waiting signal.
- (15) **Flash Key** - Enters a 600ms hook switch flash for accessing special telephone system features.
- (16) **Mic.**
- (17) **Hold Key** - Places a caller on hold.
- (18) **Hole for placard**
- (19) **To Tel** - Connect line cord from wall to telephone set.
- (20) **Ringer Volume** – Adjusts ringer volume to LO or HI.
- (21) **Mount hole**
- (22) **Bracket for cord tray.**

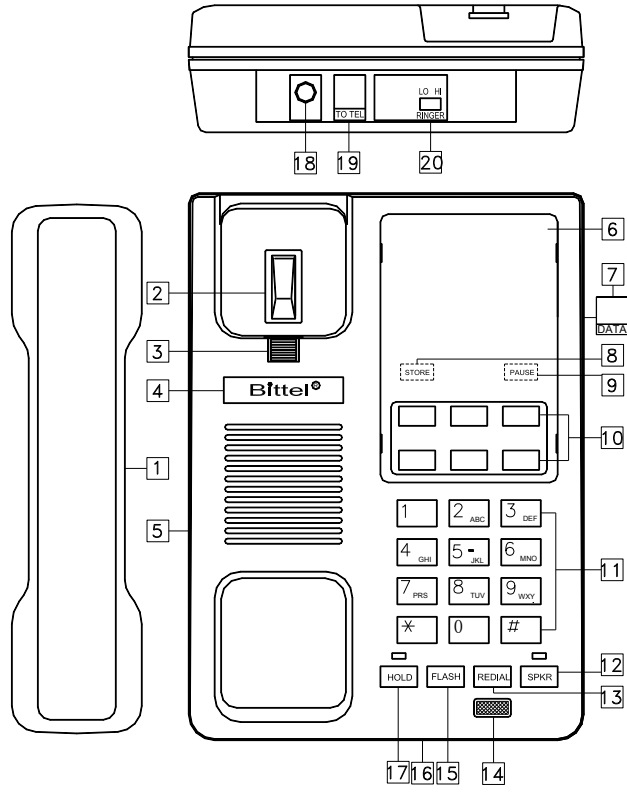

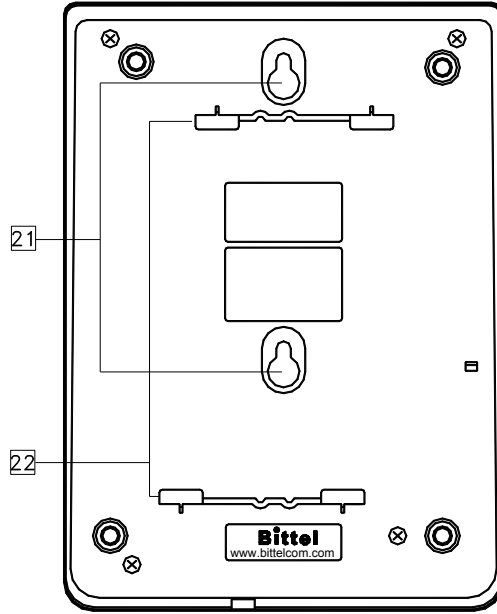

PLACING A CALL

Using the Handset

- 6) Lift the handset.
- 2) Listen for dial tone. Dial the desired number, or press [REDIAL] key to automatically dial a number.
- 3) To end the call, hang up by replacing the handset.

Using the Speakerphone

- 1) Press the [SPKR] key
- 2) Wait for a dial tone.
- 3) Dial a phone number.
- 4) Press [SPKR] key when finished.

RECEIVING A CALL

Using the Handset

When the phone rings, the [MWL] flashes rapidly.

- 2) Pick up the handset.
- 3) To end the call, hang up by replacing the handset.

SPEAKERPHONE TIPS

To activate the handset from speakerphone mode:

Lift the handset.

To activate the Speakerphone from handset mode:

- 4) Press the [SPKR] key.
- 5) Hang up the handset.

USING THE [HOLD] KEY

Place a call on hold

Press [HOLD] key to place the caller on hold. The [Hold] key indicator will get red.

TO REMOVE A CALL FROM HOLD

To release hold, in handset mode, press [HOLD] key; in speakerphone mode, press [SPKR] key.

TO CHANGE PHONES AFTER PLACING A CALL ON HOLD

- 4) Place the caller on hold by pressing [HOLD] key.
- 5) Replace the handset in its cradle. When using speakerphone, just press [HOLD] to place the caller on hold.
- 6) Pick up the call at another telephone. The BITTEL phone will detect the current status and remove the hold condition at the original phone.

ADJUSTING RING VOLUME

Locate the adjustment controls on the top of the telephone labeled RINGER LO/HI . Slide the switch to the desired LOW or HI ring volume .

PROGRAMMING MEMORY KEYS

To program the auto dial keys, the telephone must be connected to a telephone line.

- Lift handset or press [SPKR].
- press [STORE],.

Dial the number desired including [PAUSE] and [FLASH] key where necessary, press [STORE] key again . The sequence can be up to 16 digits in length.

- Press a Memory key to finish.
- Hang up the handset or press the [SPKR] key to disconnect the telephone.

MESSAGE WAITING LIGHT

This is a new ringing high voltage neon/90V systems.

After stored a voice mail access number, If there's message waiting, lift handset or press [SPKR], then press [MWL] key to play messages.

[MWL] functions also as ringing indicator.

CONVERTING FROM DESK TO WALL MOUNT

It is best to do the conversion before connecting the handset and line cords.

Hold the telephone in front of the two mushroom shaped mounting post on the wall. Both eyelets should line up with the mounting posts, slide telephone down slightly. When properly installed the telephone will be stable and secure.

FCC Approval

The Blue moon telephone Series complies with Part 68 of the FCC rules. On the bottom of this telephone is a label that contains, among other information, the FCC registration number and the ringer equivalence number (REN) for this telephone. If requested, you must provide this information to the Telephone Company.

CE Approval

The Blue moon telephone series complies with CE approval.

The Ringer Equivalence Number (REN)

The Ringer Equivalence Number (REN) assigned to each terminal device provides an indication of the maximum number of terminals allowed to be connected to a telephone interface. The termination on an interface may consist of any combination of devices subject only to the requirement that the sum of the Ringer Equivalence Numbers of all the devices does not exceed 5.

Jacks

The Blue moon series phone uses RJ11C USOC standard modular jacks.

Hearing Aid Compatibility

The Blue moon Series is hearing aid compatible.

Warranty

This product is warranted for a period of 12 months from the date of purchase against faulty materials or workmanship. If during this period a defect arises, we may repair or replace the product, at Bittel's discretion, provided that:

- 1) The product has not been used for any purpose other than normal use,
 - 2) Unauthorized product repair or modifications have not been attempted.
 - 3) The product has never been used in a harsh or corrosive environment.
- No damage in transit

**THIS LIMITED WARRANTY GIVES THE BUYER SPECIFIC LEGAL RIGHTS.
THE BUYER MAY ALSO HAVE OTHER RIGHTS WHICH VARY FROM
JURISDICTION TO JURISDICTION.**

This warranty is only valid for merchandise purchased directly from Bittelle or from dealers or distributors Bittel Inc. authorized .

FCC WARNING

This device complies with part 15 of the FCC Rules. Operation is subject to the following two conditions: (1) This device may not cause harmful interference, and (2) this device must accept any interference received, including interference that may cause undesired operation.

CONTACTING BITTEL

Telephone: (86) 633-2212119/2212103 /2212160

Internet: www.bittelcom.com

Email: sales @bittelcom.com

Address: Shandong Bittel Electronics Co. Ltd.

No. 1 Rizhao North Road, Rizhao,

Shandong , 276800, China

Copyright © 2009 Bittel Inc. All rights reserved.